


Quick Start Guide




Passive MIXER MX500

Mini Stereo Four Channel Passive Mixer

Passive Mixer MX500 Controls

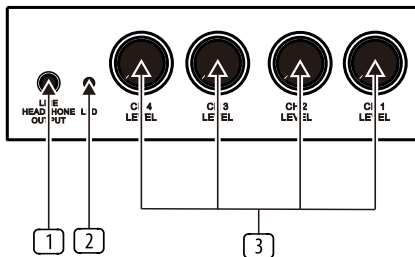

- 1 Connect up to headphones to these 3.5 connectors.
 - 2 This **ON** LED is illuminated as soon as the unit is connected to the power.
 - 3 Using the **LEVEL** controls you can set the output level of each channel.
- ♦ **High volume levels can damage your hearing or your headphones. Please turn down all volume controls to zero (all the way to the left) before you power up the amp. Always make sure you use appropriate volume levels.**

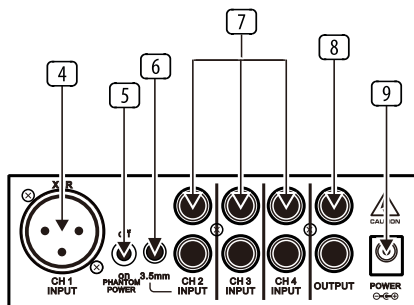

- 4** INPUT accepts signals via XLR cables
- 5** ON/OFF button turns the power on and off.
- 6** Ch2 to these 3.5 STEREO connectors (INPUT).
- 7** Ch2/Ch3/Ch4 to these RCA STEREO(L/R) connectors (INPUT).
- 8** The OUTPUT carries the MIX signal and is on a RCA (L/R)connector.
- 9** IN Accepts a AC Power adapter.

Other important information

EN Important information

- 1. Register online.** Please register your new MUSIC Group equipment right after you purchase it by visiting behringer.com. Registering your purchase using our simple online form helps us to process your repair claims more quickly and efficiently. Also, read the terms and conditions of our warranty, if applicable.
- 2. Malfunction.** Should your MUSIC Group Authorized Reseller not be located in your vicinity, you may contact the MUSIC Group Authorized Fulfiller for your country listed under "Support" at behringer.com. Should your country not be listed, please check if your problem can be dealt with by our "Online Support" which may also be found under "Support" at behringer.com. Alternatively, please submit an online warranty claim at behringer.com BEFORE returning the product.
- 3. Power Connections.** Before plugging the unit into a power socket, please make sure you are using the correct mains voltage for your particular model. Faulty fuses must be replaced with fuses of the same type and rating without exception.

ES Aspectos importantes

- 1. Registro online.** Le recomendamos que registre su nuevo aparato MUSIC Group justo después de su compra accediendo a la página web behringer.com. El registro de su compra a través de nuestro sencillo sistema online nos ayudará a resolver cualquier incidencia que se presente a la mayor brevedad posible. Además, aproveche para leer los términos y condiciones de nuestra garantía, si es aplicable en su caso.
- 2. Averías.** En el caso de que no exista un distribuidor MUSIC Group en las inmediaciones, puede ponerse en contacto con el distribuidor MUSIC Group de su país, que encontrará dentro del apartado "Support" de nuestra página web behringer.com. En caso de que su país no aparezca en ese listado, acceda a la sección "Online Support" (que también encontrará dentro del apartado "Support" de nuestra página web) y compruebe si su problema aparece descrito y solucionado allí. De forma alternativa, envíenos a través de la página web una solicitud online de soporte en periodo de garantía ANTES de devolvernos el aparato.
- 3. Conexiones de corriente.** Antes de enchufar este aparato a una salida de corriente, asegúrese de que dicha salida sea del voltaje adecuado para su modelo concreto. En caso de que deba sustituir un fusible quemado, deberá hacerlo por otro de idénticas especificaciones, sin excepción.